NX-series EtherNet/IP™ Coupler Unit NX-EIC

Connecting to open industrial network standard EtherNet/IP

• The EtherNet/IP Coupler Unit is the link between the EtherNet/IP multivendor network and the NX-series I/O Units and Safety Units. With wide variety of the I/O Units and Safety Units, the NX-series is the perfect match for the CJ-series and multivendor Controllers.




Features

- Up to 63 NX-IO Units can be connected to one EtherNet/IP Coupler Unit. Standard and high-performance units can be mixed.*
- Each Coupler plus its I/O form just a single EtherCAT node on the network.
- I/O control and safety control can be integrated by connecting Units for safety.
- The IP address can be found on the label on the Unit, without using software.
- Slave configuration by Sysmac Studio can be done centrally via the controller, or on-the-spot using the Coupler's built-in USB port.
- * Input per Coupler Unit: Maximum 504 bytes, Output per Coupler Unit: Maximum 504 bytes

System Configuration

System Configuration of Slave Terminals

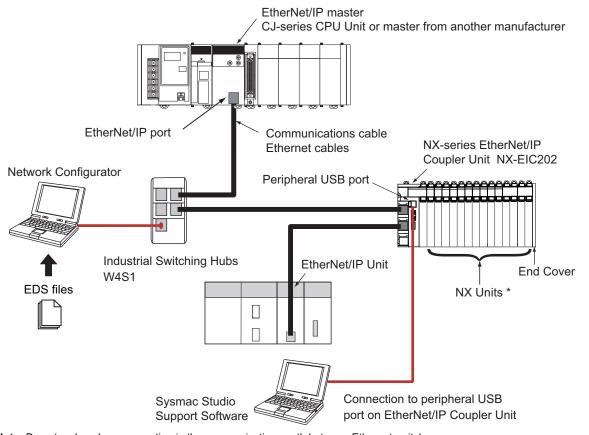

Note: Do not make a loop connection in the communications path between Ethernet switches. * Refer to *Configuration Unit* on page 8 for the NX Units that can be connected to the NX-series EtherNet/IP Coupler Unit.

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. EtherCAT[®] is a registered trademark of Beckhoff Automation GmbH for their patented technology. EtherNet/IPTM is the trademarks of ODVA. Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

Ordering Information

Applicable standards Refer to the OMRON website (www.ia.omron.com) or ask your OMRON representative for the most recent applicable standards for each model.

EtherNet/IP Coupler Unit

| Product name | Current consumption | Maximum I/O power supply current | Model |
|--------------------------|---------------------|----------------------------------|-----------|
| EtherNet/IP Coupler Unit | | | |
| | 1.60 W or lower | 10 A | NX-EIC202 |

Automation Software Sysmac Studio

The Sysmac Studio is the software that provides an integrated environment for setting, programming, debugging and maintenance of machine automation controllers including the NJ/NX-series CPU Units, NY-series Industrial PC, EtherCAT Slave, and the HMI.

For details, refer to your local OMRON website and Sysmac Studio Catalog (Cat. No. P138).

Connecting Cable

Peripheral (USB) Port

Use a commercially available USB-certified cable. Specifications: USB 1.1 or 2.0 cable (A connector - B connector), 5.0 m max.

Recommended EtherNet/IP Communications Cables

For EtherNet/IP, required specification for the communications cables varies depending on the baud rate. For 100BASE-TX/10BASE-T, use a straight or cross STP (shielded twisted-pair) cable of category 5 or higher. For 1000BASE-T, use a straight or cross STP cable of category 5e or higher with double shielding (aluminum tape and braiding).

Cable with Connectors

| Item | Appearance | Recommended manufacturer | Cable length (m) | Model |
|--|-----------------|--------------------------|------------------|----------------------|
| Cable with Connectors on Both Ends | | | 0.3 | XS6W-6PUR8SS30CM-YF |
| (RJ45/RJ45) Standard RJ45 plugs type *1 | | | 0.5 | XS6W-6PUR8SS50CM-YF |
| Wire Gauge and Number of Pairs: | | | 1 | XS6W-6PUR8SS100CM-YF |
| AWG26, 4-pair Cable Cable Sheath material: PUR | | OMRON | 2 | XS6W-6PUR8SS200CM-YF |
| Cable color: Yellow *2 EtherCAT/ | la ^r | | 3 | XS6W-6PUR8SS300CM-YF |
| EtherNet/IP (10BASE/100BASE) | | | 5 | XS6W-6PUR8SS500CM-YF |
| Cable with Connectors on Both Ends | | | 0.3 | XS5W-T421-AMD-K |
| (RJ45/RJ45) Rugged RJ45 plugs type *1 | | | 0.5 | XS5W-T421-BMD-K |
| Wire Gauge and Number of Pairs: | | OMRON | 1 | XS5W-T421-CMD-K |
| AWG22, 2-pair Cable | *0 | OMINON | 2 | XS5W-T421-DMD-K |
| Cable color: Light blue EtherCAT/ | | | 5 | XS5W-T421-GMD-K |
| EtherNet/IP (10BASE/100BASE) | | | 10 | XS5W-T421-JMD-K |
| Cable with Connectors on Both Ends | | | 0.5 | XS5W-T421-BM2-SS |
| (M12 Straight/M12 Straight) Shield Strengthening Connector cable *3 | - | 1 XS5W-T4 | XS5W-T421-CM2-SS | |
| M12/Smartclick Connectors Wire Gauge and Number of Pairs: | | OMRON | 2 | XS5W-T421-DM2-SS |
| AWG22, 2-pair Cable | | UMRON | 3 | XS5W-T421-EM2-SS |
| Cable color: Black EtherCAT/ | | | 5 | XS5W-T421-GM2-SS |
| EtherNet/IP (10BASE/100BASE) | | | 10 | XS5W-T421-JM2-SS |
| Cable with Connectors on Both Ends (M12 Straight/RJ45) | | | 0.5 | XS5W-T421-BMC-SS |
| Shield Strengthening Connector cable *3 | | | 1 | XS5W-T421-CMC-SS |
| M12/Smartclick Connectors Rugged RJ45 plugs type | 15 | OMRON | 2 | XS5W-T421-DMC-SS |
| Wire Gauge and Number of Pairs: AWG22, 2-pair Cable | -0 | | 3 | XS5W-T421-EMC-SS |
| Cable color: Black EtherCAT/ | | | 5 | XS5W-T421-GMC-SS |
| EtherNet/IP (10BASE/100BASE) | | | 10 | XS5W-T421-JMC-SS |

*1. Cables with standard RJ45 plugs are available in the following lengths: 0.2 m, 0.3 m, 0.5 m, 1 m, 1.5 m, 2 m, 3 m, 5 m, 7.5 m, 10 m, 15 m, 20 m. Cables with rugged RJ45 plugs are available in the following lengths: 0.3 m, 0.5 m, 1 m, 2 m, 3 m, 5 m, 10 m, 15 m. For details, refer to the *Industrial Ethernet Connectors Catalog* (Cat. No. G019).

*2. Cables colors are available in blue, yellow, or Green.

*3. For details, contact your OMRON representative.

Cables / Connectors

| Item | | Recommended manufacturer | Model | |
|--|--|----------------------------|-----------------------|-----------------|
| Products for EtherNet/IP | Wire Gauge and Number of | Cables | Kuramo Electric Co. | KETH-SB *1 |
| (100BASE-TX) | Pairs: AWG24, 4-pair Cable | RJ45 Connectors | Panduit Corporation | MPS588-C *1 |
| | Wire Gauge and | Cables | Kuramo Electric Co. | KETH-PSB-OMR *2 |
| | | | JMACS Japan Co., Ltd. | PNET/B *2 |
| Products for EtherNet/IP (100BASE-TX) | Number of Pairs: AWG22, 2-pair Cable | RJ45 Assembly Connector | OMRON | XS6G-T421-1 *2 |

*1. We recommend you to use above cable for EtherNet/IP and RJ45 Connector together.*2. We recommend you to use above cable for EtherNet/IP and RJ45 Assembly Connector together.


Optional Products

| Product name | Specification | | | Model | |
|---------------------------------|--|-----|----------|----------|-----------|
| Unit/Terminal Block Coding Pins | Pins for 10 Units 30 terminal block pins and 30 Unit pins) | | | NX-AUX02 | |
| Specification | | | | | |
| Product name | No. of terminals Terminal number indications Ground terminal Terminal current capacity | | | Model | |
| Terminal Block | 8 | A/B | Provided | 10 A | NX-TBC082 |

Accessories

End Cover (NX-END01)

One End Cover is provided together with the EtherNet/IP Coupler Unit.

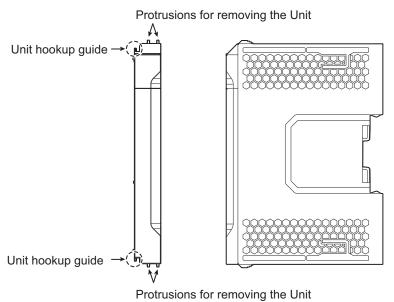

General Specification

| | Item | Specification |
|---|-------------------------------|---|
| Enclosure | | Mounted in a panel |
| Grounding me | ethod | Ground to 100 Ω or less |
| | Ambient operating temperature | 0 to 55°C |
| | Ambient operating humidity | 10% to 95% (with no condensation or icing) |
| | Atmosphere | Must be free from corrosive gases. |
| | Ambient storage temperature | -25 to 70°C (with no condensation or icing) |
| | Altitude | 2,000 m max. |
| Operating | Pollution degree | Pollution degree 2 or less: Meets IEC 61010-2-201. |
| environment | Noise immunity | Conforms to IEC 61000-4-4. 2 kV (power supply line) |
| •••••• | Overvoltage category | Category II: Meets IEC 61010-2-201. |
| | EMC immunity level | Zone B |
| | Vibration resistance | Conforms to IEC 60068-2-6. 5 to 8.4 Hz with 3.5-mm amplitude, 8.4 to 150 Hz, acceleration of 9.8 m/s ² , 100 min each in X, Y, and Z directions (10 sweeps of 10 min each = 100 min total) *1 |
| Shock resistance Conforms to IEC 60068-2-27. 147 m/s ² , 3 times each in X, Y, and Z dir | | Conforms to IEC 60068-2-27. 147 m/s ² , 3 times each in X, Y, and Z directions *1 |
| Applicable sta | andards *2 | cULus: Listed UL508, ANSI/ISA 12.12.01 EU: EN 61131-2, C-Tick or RCM, KC: KC Registration |

*1. Refer to the NX-series Digital I/O Units User's Manual (Cat. No. W521) for the vibration and shock resistance specifications of the Relay Output Unit.

*2. Refer to the OMRON website (http://www.ia.omron.com/) or consult your OMRON representative for the most recent applicable standards for each model.

EtherNet/IP Coupler Unit Specifications


| | ltem | Specification | | |
|---|---|---|---|--|
| Model | | NX-EIC202 | | |
| Number of co | nnectable NX Units | 63 Units max.*1 | | |
| | | EtherNet/IP | | |
| Communications protocols | | UDP/IP and TCP/IP (Message Services) | Number of buffers (sockets): • 8 message buffers for server • No message buffers for client • Shared buffers for UDP/IP messages and TCP/IP messages Maximum message size: • Request: 492 bytes • Response: 496 bytes Maximum NX output data size: • 490 bytes Maximum NX input data size: • 496 bytes | |
| Modulation | | Baseband | | |
| Link speed | | 100 Mbps | | |
| Physical laye | | 100BASE-TX (IEEE 802.3) | | |
| Received Packet Interval (RPI, refresh cycle) | | 4 to 1,000 ms | | |
| Allowed communications bandwidth addressing to the local node | | 1,000 pps | | |
| Topology | | Line, Tree, Star | | |
| Ethernet Swit | ch | Layer 2 Ethernet switch | | |
| Transmission media | | Category 5 or higher twisted-pair cable (Recommended cable: double-shielded cable with aluminum tape and braiding) | | |
| Transmission | distance | Distance between nodes: 100 m or less | | |
| NX bus I/O da | ta size | Input: 512 bytes max. (including input data, status, and unused areas) Output: 512 bytes max. (including output data and unused areas) | | |
| EtherNet/IP I/ | O connection size | Input: 504 bytes max. (including input data, status, and unused areas) Output: 504 bytes max. (including output data and unused areas) | | |
| Refreshing m | | Free-Run refreshing | | |
| | Power supply voltage | 24 VDC (20.4 to 28.8 VDC) | | |
| | NX Unit power supply capacity | 10 W max. (Refer to Installation orientation | and restrictions for details.) | |
| Unit power | NX Unit power supply efficiency | 70% | | |
| supply *2 | Isolation method | No isolation between NX Unit power suppl | y and Unit power supply terminals | |
| | Current capacity of power supply terminals | 4 A max. | | |
| | Power supply voltage | 5 to 24 VDC (4.5 to 28.8 VDC) *3 | | |
| I/O power | Maximum I/O power supply current | 10 A (Refer to Installation orientation and r | restrictions for details.) | |
| supply *2 Current capacity of power supply terminals 10 A max. | | | | |
| NX Unit powe | r consumption | 1.60 W max. | | |
| Current const | umption from I/O power supply | 10 mA max. (for 24 VDC) | | |
| *1 Pofor to the | NY-series Safety Control Unit User | a Manual (Cat. No. 7020) for the number of | f Safety Control Units that can be connected | |

*1. Refer to the NX-series Safety Control Unit User's Manual (Cat. No. Z930) for the number of Safety Control Units that can be connected.

*2. Refer to the NX-series EtherNet/IP™Coupler Unit User's Manual (Cat. No. W536) for procedures for designing the Unit power supply system and I/O power supply system.

*3. Use a voltage that is appropriate for the I/O circuits of the NX Units and the connected external devices.

| Item | Specification | | |
|---|---|--|--|
| Dielectric strength | 510 VAC for 1 min, leakage current: 5 mA max. (between isolated circuits) | | |
| Insulation resistance | 100 VDC, 20 M Ω min. (between isolated circuits) | | |
| External connection terminals | Communications Connector For EtherNet/IP communications. • RJ45 × 2 (shielded) Screwless Clamping Terminal Block For Unit power supply, I/O power supply, and grounding. Removable. Peripheral USB Port For Sysmac Studio connection. • Physical layer: USB 2.0-compliant, B-type connector • Transmission distance: 5 m max. 46 × 400 × 71 mm (WXHXD) | | |
| Dimensions | 46 × 100 × 71 mm (W×H×D) | | |
| Weight | 150 g max. | | |
| Installation orientation and restrictions | Installation orientation: 6 possible orientations Restrictions: • Used in any other orientation than the upright installation orientation. Unit power supply [W] 10 W output, 40°C 4 2 0 0 10 20 30 40 45 50 55 60 Ambient temperature [°C] • Used in any other orientation than the upright installation orientation. Unit power supply [W] 10 W output, 40°C 4 2 0 0 10 20 30 40 45 50 55 60 Ambient temperature [°C] • Used in any other orientation than the upright installation orientation. Unit power supply [W] 10 W output, 40°C 4 2 0 0 10 20 30 40 45 50 55 60 Ambient temperature [°C] • Used in any other orientation than the upright installation orientation. Unit power supply [W] 10 A current, 45°C 6 4 2 0 0 10 20 30 40 45 50 55 60 Ambient temperature [°C] | | |

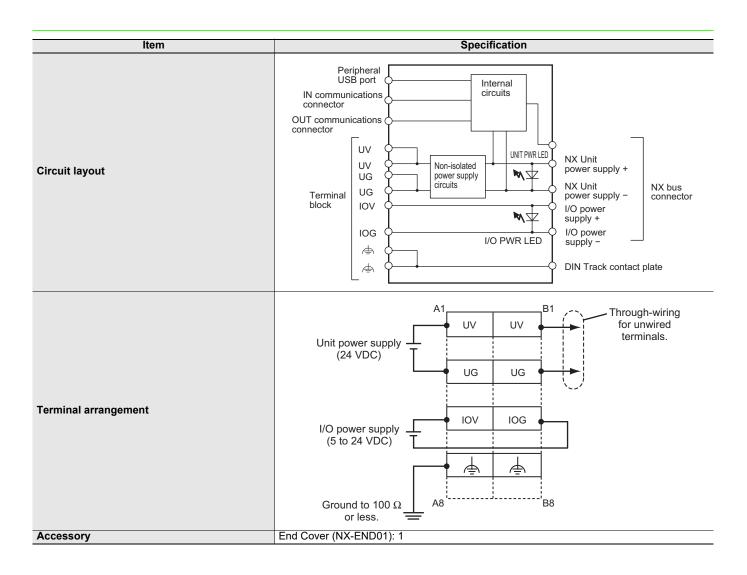

Configuration Unit

Refer to the user's manuals for information on the NX Units that can be connected to the NX-series EtherNet/IP Coupler Unit.

EtherNet/IP Coupler Unit

| Unit | Model |
|--------------------------|-----------|
| EtherNet/IP Coupler Unit | NX-EIC202 |

I/O Units

| Unit | | Model | | | | |
|-------------------------------|--|--|--|--|---|--|
| Onit | 2-point Units | 4-point Units | 8-point Units | 16-point Units | 32-point Units | |
| Digital Input Unit | - | NX-ID3317 NX-ID3343 NX-ID3417 NX-ID3443 NX-IA3117 | NX-ID4342 NX-ID4442 | NX-ID5142-1 NX-ID5142-5 NX-ID5342 NX-ID5442 | NX-ID6142-5 NX-ID6142-6 NX-ID6342 NX-ID6442 | |
| Digital Output Unit | NX-OC2633 NX-OC2733 | NX-OD3121 NX-OD3153 NX-OD3256 NX-OD3257 NX-OD3268 | NX-OD4121 NX-OD4256 NX-OC4633 | NX-OD5121 NX-OD5121-1 NX-OD5121-5 NX-OD5256 NX-OD5256-1 NX-OD5256-5 | NX-OD6121 NX-OD6121-5 NX-OD6121-6 NX-OD6256 NX-OD6256-5 | |
| Digital Mixed I/O Unit | - | _ | - | NX-MD6121-5 NX-MD6121-6 NX-MD6256-5 | - | |
| Analog Input Unit | NX-AD2603 NX-AD2604 NX-AD2608 NX-AD2203 NX-AD2204 NX-AD2208 | NX-AD3603 NX-AD3604 NX-AD3608 NX-AD3203 NX-AD3204 NX-AD3208 | NX-AD4603 NX-AD4604 NX-AD4608 NX-AD4203 NX-AD4204 NX-AD4208 | _ | _ | |
| Analog Output Unit | NX-DA2603 NX-DA2605 NX-DA2203 NX-DA2205 | NX-DA3603 NX-DA3605 NX-DA3203 NX-DA3205 | _ | - | - | |
| Temperature Input Unit | NX-TS2101 NX-TS2102 NX-TS2104 NX-TS2201 NX-TS2202 NX-TS2204 | NX-TS3101 NX-TS3102 NX-TS3104 NX-TS3201 NX-TS3202 NX-TS3204 | _ | _ | _ | |
| Heater Burnout Detection Unit | - | NX-HB3101 NX-HB3201 | _ | - | - | |

Temperature Control Units

| Unit | | Model | | | |
|------|---------|---|--------------|--|--|
| Unit | 2CH 4CH | | 8CH | | |
| | | NX-TC3405, NX-TC3406, NX-TC3407, NX-TC3408, NX-HTC3510-5 | NX-HTC4505-5 | | |

Load Cell Input Unit

| Unit | Model |
|----------------------|-----------|
| Load Cell Input Unit | NX-RS1201 |

Position Interface Units

| Unit | Model | | |
|--------------------------------|--|----------------------|--|
| onit | 1CH | 2CH | |
| Incremental Encoder Input Unit | NX-EC0112, NX-EC0122, NX-EC0132, NX-EC0142 | NX-EC0212, NX-EC0222 | |
| SSI Input Unit | NX-ECS112 | NX-ECS212 | |
| Pulse Output Unit | NX-PG0112, NX-PG0122 | - | |

Communications Interface Units

| Unit | Model |
|------|------------------------------------|
| | NX-CIF101, NX-CIF105, NX-CIF210 |

System Units

| Unit | Model |
|--------------------------------------|------------------------------------|
| Additional NX Unit Power Supply Unit | NX-PD1000 |
| Additional I/O Power Supply Unit | NX-PF0630, NX-PF0730 |
| I/O Power Supply Connection Unit | NX-PC0010, NX-PC0020, NX-PC0030 |
| Shield Connection Unit | NX-TBX01 |

IO-Link Master Unit

| Unit | Model | |
|---------------------|-----------|--|
| IO-Link Master Unit | NX-ILM400 | |

Safety Control Units

| Unit | Model |
|-------------------------------------|-------------------------|
| Safety CPU Unit | NX-SL3300 *1 |
| Safety Input Unit | NX-SIH400 *2, NX-SID800 |
| Safety Output Unit | NX-SOH200, NX-SOD400 |
| *1 Safety CPUUnit Ver 1.1 or higher | |

*2. Safety Input Unit Ver.1.1 or higher.

Version Information

Depending on the type and model of the Unit, some Units do not have all of the versions given in the corresponding versions. If a Unit does not have the specified version, support is provided by the oldest available version after the specified version. Refer to the user's manuals for the specific Units for the relation between models and versions.

The versions of each unit and support tool listed in the Corespnding unit version/version indicate whether the EtherNet/IP Coupler Unit can be connected or configured.

Connection to the NJ/NX-series CPU Unit or NY-series Industrial PC NX-series CPU Unit or NY-series Industrial PC

| EtherNet/IP C | oupler Unit | it Corresponding unit version/vers | | | |
|---------------|-----------------|--|-----------------------|---|----------------------------|
| Model | Unit version | Unit version of CPU Unit or Industrial PC | Sysmac Studio version | Network Configurator for EtherNet/IP version | CX-ConfiguratorFDT version |
| NX-EIC202 | Ver.1.2 | Ver.1.14 | Ver.1.19 | Ver.3.21 | Ver.2.4 * |
| INA-EIC2U2 | Ver.1.0 | Not possible. | Not possible. | Not possible. | Not possible. |

* The CX-ConfiguratorFDT with version 2.2 or later can be used if it is connected to the peripheral USB port on the EtherNet/IP Coupler Unit.

NJ-series CPU Unit

| EtherNet/IP C | Coupler Unit | Corresponding unit version/version | | | | | |
|---------------|-----------------|------------------------------------|---|-------------------------------|--------------------------|---|-----------------------------------|
| Model | Unit version | Unit version of CPU Unit | Unit version of CJ1W-EIP21S | Unit version of CJ1W-EIP21 | Sysmac Studio version | Network Configurator for EtherNet/IP version | CX- ConfiguratorFDT version |
| NX-EIC202 | Ver.1.2 | Ver.1.14 | Ver.1.0 (Lot number 241001⊡ or later) | Ver.2.1 | Ver.1.19 | Ver.3.21 | Ver.2.4 * |
| | Ver.1.0 | Not possible. | Not possible. | Not possible. | Not possible. | Not possible. | Not possible. |

* The CX-ConfiguratorFDT with version 2.2 or later can be used if it is connected to the peripheral USB port on the EtherNet/IP Coupler Unit.

Connection to CS/CJ/CP-series CPU Unit CS1G/CS1H/CJ1H/CJ1M * CPU Units

* Final order entry date for CJ1M:The end of March, 2021

| EtherNet/IP C | oupler Unit | Corresponding unit version/version | | | | | |
|---------------|-----------------|------------------------------------|--------------------------------|--|---|-------------------------------|-----------------------------------|
| Model | Unit version | Unit version of CPU Unit | Unit version of CS1W-EIP21S | Unit version of CS1W-EIP21/ CJ1W-EIP21 | Network Configurator for EtherNet/IP version | NX-IO Configurator version | CX- ConfiguratorFDT version |
| NX-EIC202 | Ver.1.2 | | | Ver.2.1 | Ver.3.00 | Ver.1.00 | Ver.2.4 *1 |
| Ver.1.0 | Ver.1.0 | Ver.3.0 | Ver.1.0 | | | Ver.1.00 *2 | Ver.2.2 |

*1. The CX-ConfiguratorFDT with version 2.2 or later can be used if it is connected to the peripheral USB port on the EtherNet/IP Coupler Unit. *2. You can connect only to the peripheral USB port on the EtherNet/IP Coupler Unit. You cannot connect with any other path.

CJ2H-CPU6□/CJ2M-CPU1□/CP1H CPU Unit

| EtherNet/IP C | oupler Unit | Corresponding unit version/version | | | | | |
|---------------|-----------------|------------------------------------|--------------------------------|-------------------------------|---|-------------------------------|-----------------------------------|
| Model | Unit version | Unit version of CPU Unit | Unit version of CJ1W-EIP21S | Unit version of CJ1W-EIP21 | Network Configurator for EtherNet/IP version | NX-IO Configurator version | CX- ConfiguratorFDT version |
| | Ver.1.2 | Ver.1.0 | Ver.1.0 | Ver.2.1 | Ver.3.00 | Ver.1.00 | Ver.2.4 *1 |
| NX-EIC202 | Ver.1.0 | ver. 1.0 | | | | Ver.1.00 *2 | Ver.2.2 |

*1. The CX-ConfiguratorFDT with version 2.2 or later can be used if it is connected to the peripheral USB port on the EtherNet/IP Coupler Unit. *2. You can connect only to the peripheral USB port on the EtherNet/IP Coupler Unit. You cannot connect with any other path.

CJ2H-CPU6□-EIP CPU Unit

| EtherNet/IP C | oupler Unit | Corresponding unit version/version | | | | | |
|---------------|-----------------|------------------------------------|--------------------------------|-------------------------------|---|-------------------------------|-----------------------------------|
| Model | Unit version | Unit version of CPU Unit | Unit version of CJ1W-EIP21S | Unit version of CJ1W-EIP21 | Network Configurator for EtherNet/IP version | NX-IO Configurator version | CX- ConfiguratorFDT version |
| NX-EIC202 | Ver.1.2 | | Ver.1.0 | Ver.2.1 | Ver.3.00 | Ver.1.00 | Ver.2.4 *1 |
| | Ver.1.0 | Ver.1.5 | | | | Ver.1.00 *2 | Ver.2.2 |

The CX-ConfiguratorFDT with version 2.2 or later can be used if it is connected to the peripheral USB port on the EtherNet/IP Coupler Unit.
You can connect only to the peripheral USB port on the EtherNet/IP Coupler Unit. You cannot connect with any other path.

CJ2M-CPU3 CPU Unit

| EtherNet/IP C | Coupler Unit | Corresponding unit version/version | | | | | |
|---------------|-----------------|------------------------------------|--------------------------------|-------------------------------|---|-------------------------------|-----------------------------------|
| Model | Unit version | Unit version of CPU Unit | Unit version of CJ1W-EIP21S | Unit version of CJ1W-EIP21 | Network Configurator for EtherNet/IP version | NX-IO Configurator version | CX- ConfiguratorFDT version |
| | Ver.1.2 | Ver.1.0 | Ver.1.0 | Ver.2.1 | Ver.3.21 | Ver.1.00 | Ver.2.4 *1 |
| NX-EIC202 Ve | Ver.1.0 | | | | | Ver.1.00 *2 | Ver.2.2 |

*1. The CX-ConfiguratorFDT with version 2.2 or later can be used if it is connected to the peripheral USB port on the EtherNet/IP Coupler Unit. *2. You can connect only to the peripheral USB port on the EtherNet/IP Coupler Unit. You cannot connect with any other path.

Connection to the Sysmac Gateway

Sysmac Gateway


| EtherNet/IP C | oupler Unit | | Corresponding u | it version/version | | |
|---------------|------------------|------------------------|---|----------------------------|----------------------------|--|
| Model | Unit version | Sysmac Gateway version | Network Configurator for EtherNet/IP version | NX-IO Configurator version | CX-ConfiguratorFDT version | |
| NX-EIC202 | Ver.1.2 | Vor 1 21 | er.1.31 Ver.3.50 | Ver.1.00 | Ver.2.4 *1 | |
| INA-EIC2U2 | X-EIC202 Ver.1.0 | | Vel.3.00 | Ver.1.00 *2 | Ver.2.2 | |

*1. The CX-ConfiguratorFDT with version 2.2 or later can be used if it is connected to the peripheral USB port on the EtherNet/IP Coupler Unit.

*2. You can connect only to the peripheral USB port on the EtherNet/IP Coupler Unit. You cannot connect with any other path.


External Interface

EtherNet/IP Coupler Unit NX-EIC202

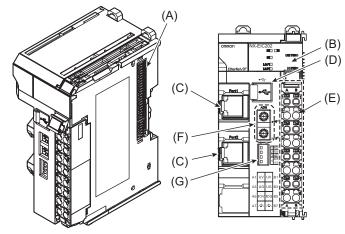

| Letter | Name | Function | | |
|--------|--|--|--|--|
| (A) | NX bus connector This connector is used to connect the EtherNet/IP Coupler Unit to the NX Unit Coupler Unit. | | | |
| (B) | Indicators | The indicators show the current operating status of the Unit and the status of the power supply. | | |
| (C) | Communications connectors | These connectors are connected to the communications cables of the EtherNet/IP network. | | |
| (D) | Peripheral USB port | This port is used to connect to the Sysmac Studio. | | |
| (E) | Terminal block | The terminal block is used to connect to the power supply cables and ground wire. | | |
| (F) | Rotary switches | The rotary switches are used to set the last octet of the IP address of the EtherNet/IP Coupler Unit as an EtherNet/IP Slave. The address is set in hexadecimal. | | |
| (G) | DIP switch | The DIP switch is used to set the default node address of the EtherNet/IP Coupler Unit as an EtherNet/IP slave. | | |

Terminal Block

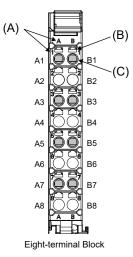

| Symbol | Name | Function | | | |
|--------|-----------------------------|--|--|--|--|
| (A) | Terminal number indications | The terminal numbers (A1 to A8 and B1 to B8) are displayed. The terminal number indicators are the same regardless of the number of terminals on the terminal block, as shown above. | | | |
| (B) | Release holes | Insert a flat-blade screwdriver into these holes to connect and remove the wires. | | | |
| (C) | Terminal holes | The wires are inserted into these holes. | | | |

Applicable Wires

Using Ferrules

If you use ferrules, attach the twisted wires to them.

Observe the application instructions for your ferrules for the wire stripping length when attaching ferrules.


Always use plated one-pin ferrules. Do not use unplated ferrules or two-pin ferrules.

The applicable ferrules, wires, and crimping tool are given in the following table.

| Terminal types | Manufacturer | Ferrule model | Applicable wire (mm ² (AWG)) | Crimping tool | |
|------------------|-----------------|---------------|--|---|--|
| | r | AI0,34-8 | 0.34 (#22) | | |
| | | AI0,5-8 | - 0.5 (#20) | | |
| | | AI0,5-10 | | | |
| Terminals other | | AI0,75-8 | 0.75 (#18) | | |
| than ground | | AI0,75-10 | | Phoenix Contact (The figure in parentheses is the applicable wire size.) CRIMPFOX 6 (0.25 to 6 mm ² , AWG 24 to 10) | |
| terminals | Phoenix Contact | AI1,0-8 | - 1.0 (#18) | | |
| | | AI1,0-10 | | | |
| | | AI1,5-8 | - 1.5 (#16) | | |
| | | AI1,5-10 | | | |
| Ground terminals | | AI2,5-10 | 2.0 *1 | | |
| | | H0.14/12 | 0.14 (#26) | | |
| | | H0.25/12 | 0.25 (#24) | | |
| | | H0.34/12 | 0.34 (#22) | | |
| | | H0.5/14 | - 0.5 (#20) | Weidmueller (The figure in parentheses is the applicable wire size.) PZ6 Roto (0.14 to 6 mm², AWG 26 to 10) | |
| Terminals other | | H0.5/16 | | | |
| than ground | Weidmuller | H0.75/14 | 0.75 (#40) | | |
| terminals | | H0.75/16 | 0.75 (#18) | | |
| | | H1.0/14 | 1.0 (#19) | | |
| | | H1.0/16 | 1.0 (#18) | | |
| | | H1.5/14 | - 1.5 (#16) | | |
| | | H1.5/16 | 1.5 (#10) | | |

*1. Some AWG 14 wires exceed 2.0 mm² and cannot be used in the screwless clamping terminal block.

When you use any ferrules other than those in the above table, crimp them to the twisted wires so that the following processed dimensions are achieved.

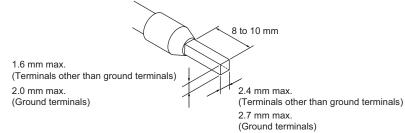

Using Twisted Wires/Solid Wires

If you use the twisted wires or the solid wires, use the following table to determine the correct wire specifications.

| Terr | Wire type | | | | | | |
|---------------------------------------|-------------------------------------|----------------|-----------------|-----------------|----------------|--|-------------------|
| Ten | Twisted wires | | Solid wire | | Wire size | Conductor length (stripping length) | |
| Classification | Current capacity | Plated | Unplated | Plated | Unplated | | (ourpping longur) |
| | 2 A max. | Possible | Possible | Possible | Possible | 0.08 to 1.5 mm ² AWG28 to 16 | 8 to 10 mm |
| All terminals except ground terminals | Greater than 2 A and 4 A or less | | Not Possible | Possible *1 | Not | | |
| ground terminale | Greater than 4 A | Possible *1 | | Not Possible | Possible | | |
| Ground terminals | | Possible | Possible | Possible *2 | Possible *2 | 2.0 mm ² | 9 to 10 mm |

*1. Secure wires to the screwless clamping terminal block. Refer to the Securing Wires in the USER'S MANUAL for how to secure wires.
*2. With the NX-TB___1 Terminal Block, use twisted wires to connect the ground terminal. Do not use a solid wire.



Conductor length (stripping length)

<Additional Information> If more than 2 A will flow on the wires, use plated wires or use ferrules.

Dimensions


(Unit: mm)

• EtherCAT Coupler Unit Only


48.1 46

ADR

۲

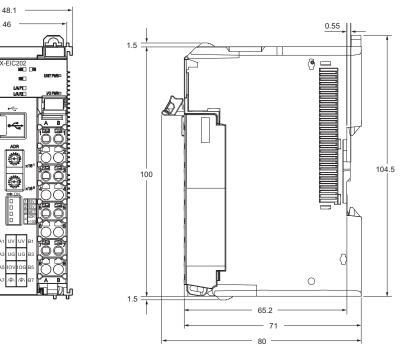


• With Cables Connected

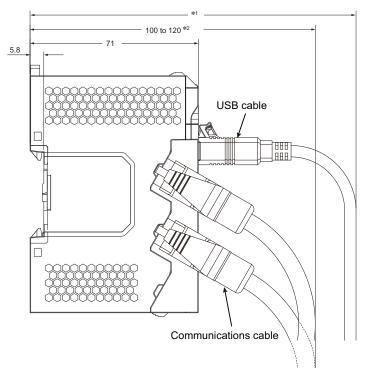

- *1. This dimension depends on the specifications of the commercially available USB-certified cable. Check the specifications of the USB cable that is used.
- *2. This is the dimension from the back of the Unit to the communications cables. 100 mm: When an MPS588-C Connector is used.

 - 120 mm: When an XS6G-T421-1 Connector is used.

• End Cover

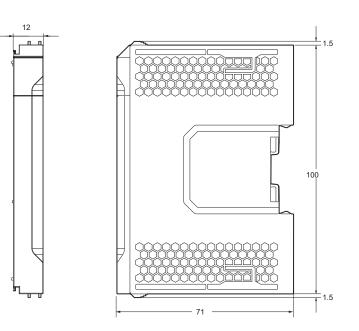

Related Manuals

| Man. No | lan. No Model Manual | | Application | Description | |
|---------|----------------------|---|-----------------------------|---|--|
| W536 | NX-EIC | NX-series EtherNet/IP Coupler Unit User's Manual | series Ether-Net/IP Coupler | Introduces the system, configuration methods, Unit hardware, setting methods, and functions of EtherNet/IP Slave Terminals that consist of an EtherNet/IP Coupler Unit and NX Units. | |

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions. Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation Industrial Automation Company